



Magnifier Immigration Expert

USER'S MANUAL

Specification

Light sources:

- White top light& white side light blink
- White top light
- White sidelight, two directions (cross)
- White sidelight blink (cross)
- UV-A 365nm
- UV-B 313nm
- UV-C 254nm
- Anti-Stokes laser (980nm)
- Retro-reflective 3M examination capability
- Diopter adjustment capability: $\pm 1.5\text{mm}$

Magnification: 12 X


View area: Diameter 20 mm

Size: 105mm×65mm×50mm

Weight: 120g

Indication lights : UV-2 lights

Battery: Rechargeable integrated battery

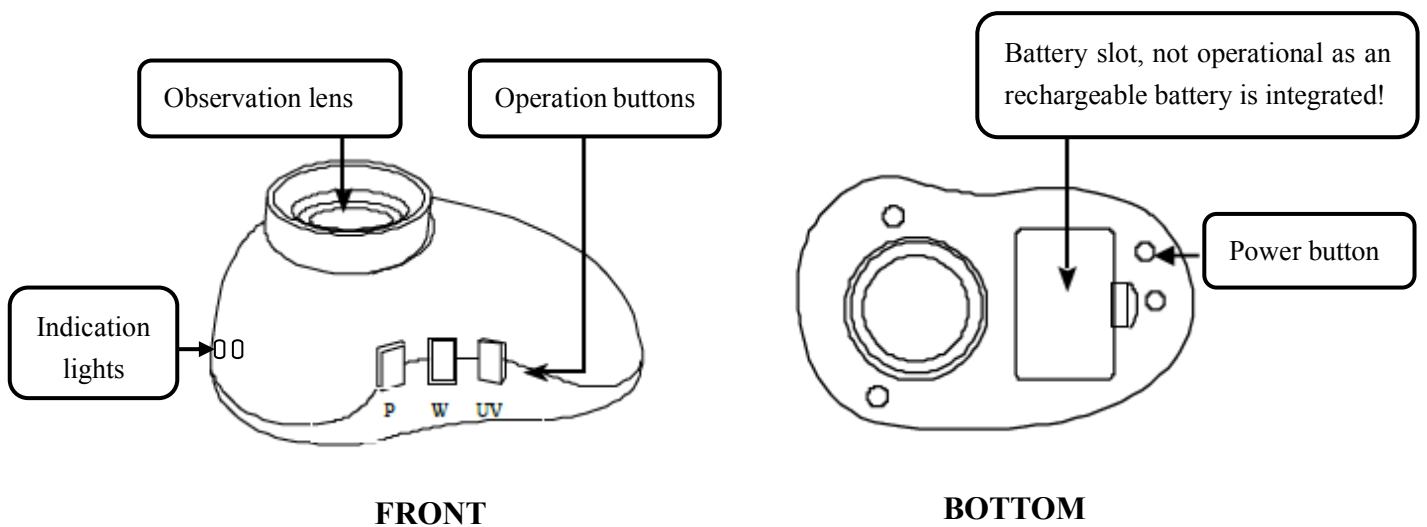

Operation

Press the power button on (at the back of magnifier) and adjust the diopter.
Place the Magnifier Immigration Expert on the questioned document or substrate.
Aim the visual checking window at the inspected spot.

1.POWER BUTTON:

ON/OFF

2.P BUTTON:

Coaxial light (Retro-reflective 3M examination)
White sidelight blink (side X, side Y)-AUTO

3.W BUTTON:

White top light
White sidelight (side X)
White sidelight (side Y)

4.UV BUTTON:

UV-A 365nm (red & red indication lights)
UV-B 313nm (green & green indication lights)
UV-C 254nm (red and green & green indication lights)
Anti-Stokes laser (980nm, without indication light)

Attention:

- **The Magnifier Immigration Expert will shut down automatically without any operation for 10 minutes.**
- **Long press- 3 seconds to turn on, short press-1 second to turn off.**